Common to all K3HB-R/-P/-C

Event Input Ratings

| K3HB-R | S-TMR, HOLD, RESET, BANK1, BANK2, BANK4 | | | | |
|------------|---|--|--|--|--|
| K3HB-P/-C | HOLD, RESET, BANK1, BANK2, BANK4 | | | | |
| Contact | ON: 1 k Ω max., OFF: 100 k Ω min. | | | | |
| No-contact | ON residual voltage: 2 V max. | | | | |
| | OFF leakage current: 0.1 mA max. | | | | |
| | Load current: 4 mA max. | | | | |
| | Maximum applied voltage: 30 VDC max. | | | | |

■ Output Ratings

Contact Output

| Item | Resistive loads (250 VAC, cos¢=1; 30 VDC, L/R=0 ms) | Inductive loads (250 VAC, closed circuit, cosφ=0.4; 30 VDC, L/R=7 ms) |
|-------------------------------|---|--|
| Rated load | 5 A at 250 VAC 5 A at 30 VDC | 1 A at 250 VAC 1 A at 30 VDC |
| Rated through current | 5 A | |
| Mechanical life expectancy | 5,000,000 operations | |
| Electrical life expectancy | 100,000 operations | |

Transistor Outputs

| Maximum load voltage | 24 VDC |
|----------------------|-------------|
| Maximum load current | 50 mA |
| Leakage current | 100 μA max. |

Digital pane indicators

Linear Output

| Item | Outputs | 0 to 20 mA | 4 to 20 mA | 0 to 5 V | 1 to 5 V | 0 to 10 V | |
|--------------------------|---------|-------------------|------------|----------------------------|------------------|-----------------|--|
| Allowable load impedance | | 500 Ω max. | | 5 kΩ min. | | | |
| Resolution | | Approx. 10,000 |) | | | | |
| Output error | | ±0.5% FS | | ±0.5% FS (±0.15 V for 1 | V or less and no | output for 0 V) | |

Serial Communications Output

| Item Type | RS-232C, RS-485 |
|------------------------|---|
| Communications method | Half duplex |
| Synchronization method | Start-stop synchronization (asynchronous) |
| Baud rate | 9600/19200/38400 bps |
| Transmission code | ASCII |
| Data length | 7 bits or 8 bits |
| Stop bit length | 2 bits or 1 bit |
| Error detection | Vertical parity and FCS |
| Parity check | Odd, even |

BCD Output I/O Ratings (Input Signal Logic: Negative)

| | I/O signal na | ime | Item | | Rating | |
|---------|--------------------------------|-------------------|-------------------------|-------------------------|-----------------------------|--|
| Inputs | K3HB-R/P REQUEST | K3HB-C REQUEST | Input signal | | No-voltage contact input | |
| | HOLD MAX | COMPEN- SATION | | urrent for age input | 10 mA | |
| | MIN RESET | RESET | Signal | ON voltage | 1.5 V max. | |
| | TIEGE I | Ievel | | OFF volt- age | 3 V min. | |
| Outputs | POLARITY OVER DATA VALID | | Maximum load voltage | | 24 VDC | |
| | | | Maximum load current | | 10 mA | |
| | RUN | | Leakag | je current | 100 µA max. | |
| | K3HB-R/P HH | K3HB-C OUT1 | Maximum load voltage | | 24 VDC | |
| | H PASS | OUT2 OUT3 | Maximum load current | | 50 mA | |
| | L OUT4 LL OUT5 | | Leakage current | | 100 µA max. | |

Refer to the *K3HB Communications User's Manual* (Cat. No. N129) for details on serial and DeviceNet communications.

DeviceNet Communications

| Communications protocol | | Conforms to DeviceN | Conforms to DeviceNet | | | | | |
|-------------------------|-------------------------|---|---|----------------------------|----------------------------------|--|--|--|
| Supported | Remote I/O | Master-Slave connection (polling, bit-strobe, COS, cyclic) | | | | | | |
| communications | communications | Conforms to DeviceNet | et communications sta | indards. | | | | |
| | I/O allocations | Allocate any I/O data | using the Configurator | | | | | |
| | | Allocate any data, such as DeviceNet-specific parameters and variable area for Digital Ir | | | | | | |
| | | Input area: 2 blocks, 6 | 60 words max. | | | | | |
| | | Output area: 1 block, a (The first word in the a | | ed for the Output Execu | tion Enabled Flags.) | | | |
| | Message | Explicit message com | munications | | | | | |
| | communications | | CompoWay/F communications commands can be executed (using explicit message communications) | | | | | |
| Connection meth | ods | Combination of multi-dr | op and T-branch conne | ctions (for trunk and drop | p lines) | | | |
| Baud rate | | DeviceNet: 500, 250, or 125 Kbps (automatic follow-up) | | | | | | |
| Communications media | | Special 5-wire cable (2 signal lines, 2 power supply lines, 1 shield line) | | | | | | |
| Communications | Communications distance | | Network length (max.) | Drop line length (max.) | Total drop line length (max.) | | | |
| | | 500 Kbps | 100 m max. (100 m max.) | 6 m max. | 39 m max. | | | |
| | | 250 Kbps | 100 m max. (250 m max.) | 6 m max. | 78 m max. | | | |
| | | 125 Kbps | 100 m max. (500 m max.) | 6 m max. | 156 m max. | | | |
| | | The values in parentheses are for Thick Cable. | | | | | | |
| Communications | power supply | 24-VDC DeviceNet power supply | | | | | | |
| Allowable voltage | e fluctuation range | 11 to 25-VDC DeviceNet power supply | | | | | | |
| Current consump | otion | 50 mA max. (24 VDC) | | | | | | |
| Maximum numbe | r of nodes | 64 (DeviceNet Configur | 64 (DeviceNet Configurator is counted as one node when connected.) | | | | | |
| Maximum numbe | r of slaves | 63 | | | | | | |
| Error control che | cks | CRC errors | | | | | | |
| DeviceNet power | supply | Supplied from DeviceNet communications connector | | | | | | |


gital pane ndicators


Connections


External Connection Diagrams

Terminal Arrangements

Note: Refer to "Internal Block Diagram" on page 5 for information on isolation.

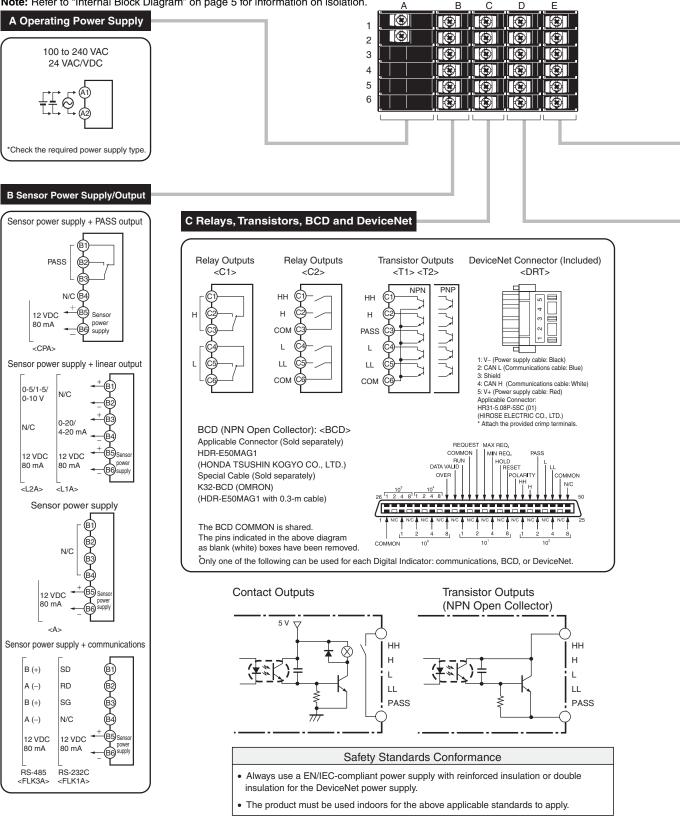


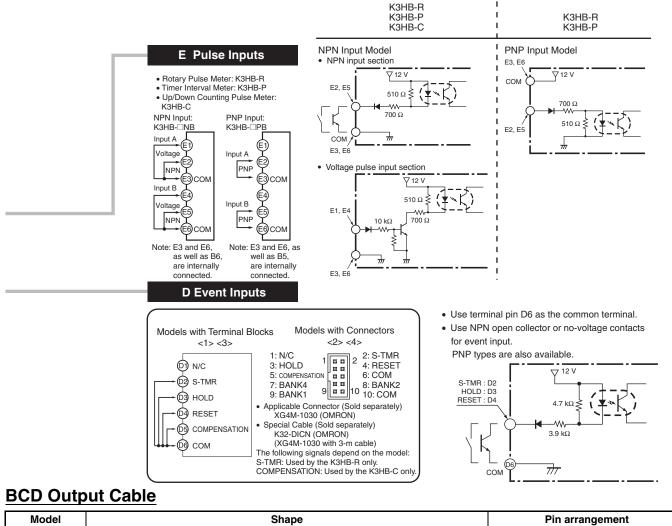

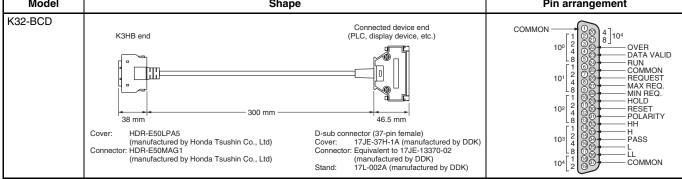


Note: The BCD Output Cable has a D-sub plug. Cover: 17JE-37H-1A (manufactured by DDK); Connector: equivalent to 17JE-23370-02 (D1) (manufactured by DDK)

Special Cable (for Event Inputs with 8-pin Connector)

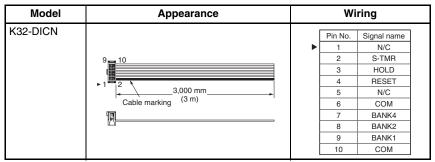


■ Derating Curve for Sensor Power Supply (Reference Values)

For 12V

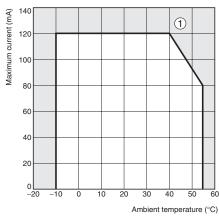

Note: 1. The above values were obtained under test conditions with the standard mounting. The derating curve will vary with the mounting conditions, so be sure to adjust accordingly.

2. Internal components may be deteriorated or damaged. Do not use the Digital Indicator outside of the derating range (i.e., do not use it in the area labeled (1), above).

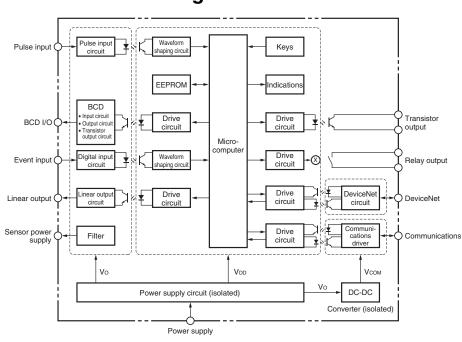


Internal Block Diagram

BCD Output Timing Chart


A REQUEST signal from a Programmable Controller or other external device is required to read BCD data.

Single Sampling Data Output

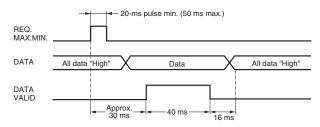

The data is set in approximately 30 ms from the rising edge of the REQUEST signal and the DATA VALID signal is output. When reading the data from a Programmable Controller, start reading the data when the DATA VALID signal turns ON. The DATA VALID signal will turn OFF 40 ms later, and the data will turn OFF 16 ms after that.


Continuous Data Output

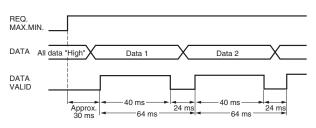

Measurement data is output every 64 ms while the REQUEST signal remains ON.

Note: If HOLD is executed when switching between data 1 and data 2, either data 1 or data 2 is output depending on the timing of the hold signal. The data will not go LOW.


• The K3HB BCD output model has an open collector output, so wired OR connection is possible

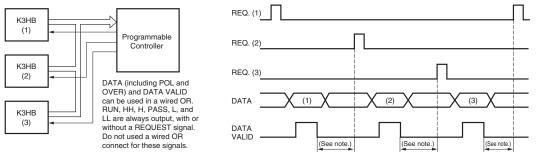

Note: Leave 20 ms min. between DATA VALID turning OFF and the REQUEST signal.


Programmable Controller Connection Example

Display Unit Connection Example

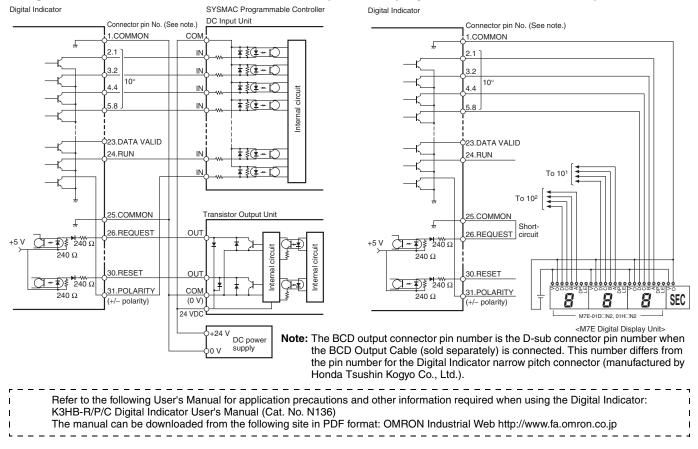

Digital panel indicators


■ Component Names and Functions

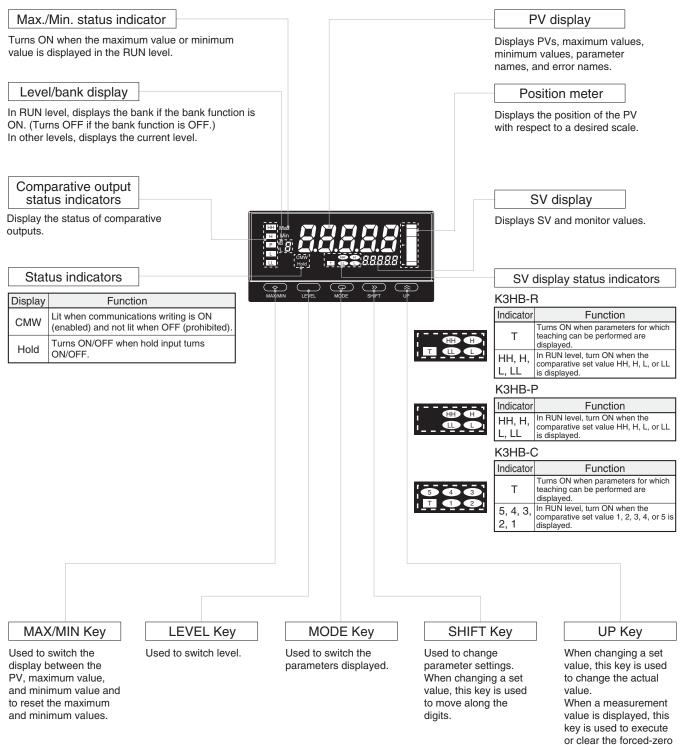

function or to execute

teaching.

Dimensions

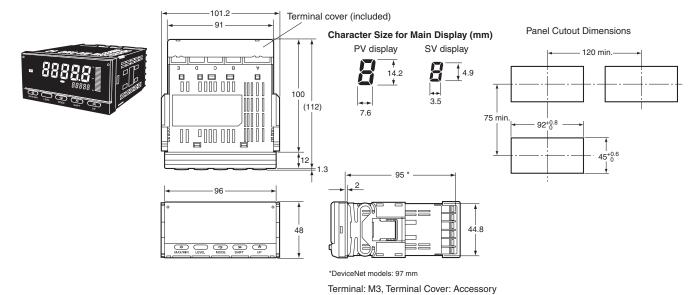


Wiring Precautions

- For terminal blocks, use the crimp terminals suitable for M3 screws.
- Tighten the terminal screws to the recommended tightening torque of approx. 0.5 N·m.
- To prevent inductive noise, separate the wiring for signal lines from that for power lines.

Wiring

• Use the crimp terminals suitable for M3 screws shown below.

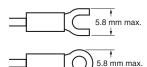

Unit Stickers (included)


- No unit stickers are attached to the Digital Indicator.
- Select the appropriate units from the unit sticker sheets provided.

| V | A | X | A | % | J | Pa | Ω |
|----------|----|------|-----|----|----|-----|---|
| s | / | Ν | m | W | °C | m³ | k |
| °F | g | m | iin | mm | | rpm | |
| VA m | | V mA | | ŀ | lz | | |
| m/min ОП | | | | ΠR | on | | |
| οu | тС | DUT | | | | | |


Note: For measurements for commercial purposes, be sure to use the unit required by any applicable laws or regulations.

Mounting Method

- **1.** Insert the K3HB into the mounting cutout in the panel.
- 2. Insert watertight packing around the Unit to make the mounting watertight.

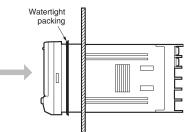


3. Insert the adapter into the grooves on the left and right sides of the rear case and push until it reaches the panel and is fixed in place.

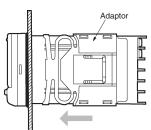

LCD Field of Vision

The K3HB is designed to have the best visibility at the angles shown in the following diagram.

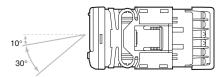

Waterproof Packing

The waterproof packing ensures a level of waterproofing that conforms to NEMA 4X. Depending on the operating environment, deterioration, contraction, or hardening may occur and replacement may be necessary. In this case, consult your OMRON representative.

Main Functions

Main Functions and Features

Measurement

Function



The K3HB-R has the following six functions for receiving and displaying input pulses.

F1: Rotation (rpm)/circumferential speed

- F2: Absolute ratio
- F3: Error ratio
- F4: Rotational difference
- F5: Flow rate ratio
- F6: Passing time

The K3HB-P has the following six functions for receiving and displaying input pulses.

F1: Passing speed

F2: Cycle

- F3: Time difference
- F4: Time band
- F5: Measuring length
- F6: Interval


The K3HB-C has the following three functions for receiving and displaying input pulses.

- F1: Individual inputs
- F2: Phase differential inputs
- F3: Pulse counting input

Filters


Ruū-Ł, Ruū-n R **Average Processing**

Average processing of input signals with extreme changes or noise smooths out the display and makes control stable.

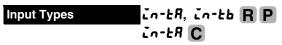

Specify the types of sensor connected to input A and input B.

Input Compensation

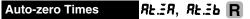

The frequency is forced to zero if there is no pulse input for a set period.

EăñPn, Eăñ-P C Input Compensation

The display can be changed to a preset compensation value using the compensation input.

Key Operations



R C The present measurement value can be used as a scaling value.



Key protection restricts level or parameter changes using the keys to prevent unintentional key operations and malfunctions.

vigital panel indicators

Outputs

Comparative Output Pattern

Standard, zone, and level comparative output patterns can be selected for comparative outputs.

Hysteresis

H<u>4</u>5 **R**

Prevents comparative outputs from chattering when the measurement value fluctuates slightly near the set value.

Output Refresh Stop

Holds the output status when a comparative result output other than PASS turns ON.

PASS Output Change PR55 R P

Comparative results other than PASS and error signals can be output from the PASS output terminal.

Output OFF Delay OFF-d R P C

Delays turning OFF comparatives for a set period. This can be used to provide sufficient time to read the comparative output ON status when the comparative result changes at short intervals.

SHOL R P C

Shot Output

Turns ON the comparative output for a specific time.



Reverses the output logic of comparative results.

Startup Compensation Timer 5-Loc R

Measurements can be stopped for a set time using an external input.

Output Test

ESE R P C

Output operation can be checked without using actual input signals by using the keys to set a test measurement value.

Linear Outputs

LSEEL, LSEEJ, LSEEH, LSEEL **RPC**

A current or voltage proportional to the change in the measurement value can be output.

SEGPAR B Standby Sequence

The comparison outputs can be kept OFF until the measurement value enters the PASS range.

Display

JESP R P C **Display Value Selection**

The display value can be set to the present value, the maximum value, or the minimum value.

Display Color Selection Color R P C

The present value display color can be set to green or red. The color of the present value can also be switched according to the comparative output.

Display Refresh Period drEF R P C

When the input changes rapidly, the display refresh period can be lengthened to control flickering and make the display easier to read.

| Position Meter | Pō5-Ł, | <i>Р</i> а́5-н, | PãS-L |
|----------------|--------|-----------------|-------|
| | RPC | | |

The present measurement value can be displayed as a position in relation to the scaling width on a 20-gradation position meter.

| Prescale | P5.Rũ, | Р5.ЯУ, | Р5.6й, | Р5.ЬУ |
|----------|------------|--------|--------|-------|
| | R P | С | | |

The input signal can be converted and displayed as any value.

Select whether or not to display the comparative value during operation.

ret R P C Display auto-return

Automatically returns the display to RUN level when there are no key operations (e.g., max./min. switching, bank settings using keys).

Other

F

Max./Min. Hold R P

Holds the maximum and minimum measurement values

Bank Selection

bn P-[R P C

Switch between 8 comparative value banks using the keys on the front panel or external inputs. A set of set comparative values can be selected as a group.

Bank Copy

Сару в р с

Any bank settings can be copied to all banks.

nEno C Interruption Memory

The measured value can be recorded when the power supply is interrupted.



The K3HB can be calibrated by the user.

Precautions

Do not touch the terminals while power is being supplied. Doing so may possibly result in electric shock. Make sure that the terminal cover is installed before using the product.




Always provide protective circuits in the network. Without protective circuits, malfunctions may possibly result in accidents that cause serious injury or significant property damage. Provide double or triple safety measures in external control circuits, such as emergency stop circuits, interlock circuits, or limit circuits, to ensure safety in the system if an abnormality occurs due to malfunction of the product or another external factor affecting the product's operation.



Do not allow pieces of metal, wire clippings, or fine metallic shavings or filings from installation to enter the product. Doing so may occasionally result in minor electric shock, fire, or malfunction.

Do not use the product in locations where flammable or explosive gases are present. Doing so may occasionally result in minor or moderate explosion, causing minor or moderate injury, or property damage.

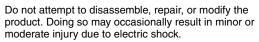

Do not use the equipment for measurements within Measurement Categories II, III or IV (according to IEC61010-1). Doing so may occasionally cause unexpected operation, resulting in minor or moderate injury, or damage to the equipment. Use the equipment for measurements only within the Measurement Category for which the product is designed.

Perform correct setting of the product according to the application. Failure to do so may occasionally cause unexpected operation, resulting in minor or moderate injury, or damage to the equipment.


Ensure safety in the event of product failure by taking safety measures, such as installing a separate monitoring system. Product failure may occasionally prevent operation of comparative outputs, resulting in damage to the connected facilities and equipment.

Tighten the screws on the terminal block and the connector locking screws securely using a tightening torque within the following ranges. Loose screws may occasionally cause fire, resulting in minor or moderate injury, or damage to the equipment.



Terminal block screws: 0.43 to 0.58 N·m Connector locking screws: 0.18 to 0.22 N·m

Make sure that the product will not be adversely affected if the DeviceNet cycle time is lengthened as a result of changing the program with online editing. Extending the cycle time may cause unexpected operation, occasionally resulting in minor or moderate injury, or damage to the equipment.

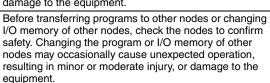



Precautions for Safe Use


- 1. Do not use the product in the following locations.
 - Locations subject to direct radiant heat from heating equipment
 - Locations where the product may come into contact with water or oil
 - · Locations subject to direct sunlight
 - Locations where dust or corrosive gases (in particular, sulfuric or ammonia gas) are present
 - Locations subject to extreme temperature changes
 - Locations where icing or condensation may occur
 - Locations subject to excessive shocks or vibration
- 2. Do not use the product in locations subject to temperatures or humidity levels outside the specified ranges or in locations prone to condensation. If the product is installed in a panel, ensure that the temperature around the product (not the temperature around the panel) does not go outside the specified range.
- 3. Provide sufficient space around the product for heat dissipation.
- 4. Use and store the product within the specified temperature and humidity ranges. If several products are mounted side-by-side or arranged in a vertical line, the heat dissipation will cause the internal temperature of the products to rise, shortening the service life. If necessary, cool the products using a fan or other cooling method.
- 5. The service life of the output relays depends on the switching capacity and switching conditions. Consider the actual application conditions and use the product within the rated load and electrical service life. Using the product beyond its service life may result in contact welding or burning.
- 6. Install the product horizontally.
- 7. Mount to a panel between 1 and 8-mm thick.
- 8. Use the specified size of crimp terminals (M3, width: 5.8 mm max.) for wiring. To connect bare wires, AWG22 (cross section: 0.326 mm²) to AWG14 (cross section: 2.081 mm²) to wire the power supply terminals and AWG28 (cross section: 0.081 mm²) to AWG16 (cross section: 1.309 mm²) for other terminals. (Length of exposed wire: 6 to 8 mm)
- 9. In order to prevent inductive noise, wire the lines connected to the product separately from power lines carrying high voltages or currents. Do not wire in parallel with or in the same cable as power lines. Other measures for reducing noise include running lines along separate ducts and using shield lines.
- **10.**Ensure that the rated voltage is achieved no longer than 2 s after turning the power ON.
- 11.Allow the product to operate without load for at least 15 minutes after the power is turned ON.
- 12.Do not install the product near devices generating strong highfrequency waves or surges. When using a noise filter, check the voltage and current and install it as close to the product as possible.
- **13.**Do not use thinner to clean the product. Use commercially available alcohol.
- 14.Be sure to confirm the name and polarity for each terminal before wiring the terminal block and connectors.
- 15.Use the product within the noted supply voltage and rated load.
- 16.Do not connect anything to unused terminals.
- **17.**Output turns OFF when the mode is changed or settings are initialized. Take this into consideration when setting up the control system.
- 18.Install an external switch or circuit breaker that complies with applicable IEC60947-1 and IEC60947-3 requirements and label them clearly so that the operator can quickly turn OFF the power.
- 19.Use the specified cables for the communications lines and stay within the specified DeviceNet communications distances. Refer to the User's Manual (Cat. No. N129) for details on communications distance specifications and cables.



- **20.**Do not pull the DeviceNet communications cables with excessive force or bend them past their natural bending radius.
- 21.Do not connect or remove connectors while the DeviceNet power is being supplied. Doing so will cause product failure or malfunction.
- 22.Use cables with heat resistance of 70° C min.


■ Noise Countermeasures

- 1. Do not install the product near devices generating strong highfrequency waves or surges, such as high-frequency welding and sewing machines.
- 2. Mount a surge suppressor or noise filter to peripheral devices generating noise, in particular, motors, transformers, solenoids, and magnet coils.

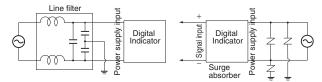

3. In order to prevent inductive noise, wire the lines connected to the terminal block separately from power lines carrying high voltages or currents. Do not wire in parallel with or in the same cable as power lines. Other measures for reducing noise include running lines along separate ducts and using shield lines.

Example of Countermeasures for Inductive Noise on Input Lines

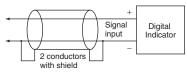

- 4. If a noise filter is used for the power supply, check the voltage and current, and install the noise filter as close to the product as possible.
- 5. Reception interference may occur if the product is used close to a radio, television, or wireless.

■ WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DIS-CLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

■ LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS, OR COMMER-CIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLI-GENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

■ SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products.

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- · Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS. To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

Cat. No. N135-E2-02 In the interest of product improvement, specifications are subject to change without notice.